

---

## Code 39

### Enable/Disable Code 39

Parameter # 0

To enable or disable Code 39, scan the appropriate bar code below.



\*Enable Code 39  
(01h)

1



Disable Code 39  
(00h)

### Enable/Disable Trioptic Code 39

Parameter # 13

Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. Trioptic Code 39 symbols always contain six characters. To enable or disable Trioptic Code 39, scan the appropriate bar code below.

2



Enable Trioptic Code 39  
(01h)



\*Disable Trioptic Code 39  
(00h)



**NOTE** You cannot enable Trioptic Code 39 and Code 39 Full ASCII simultaneously.

To set a value for a prefix or suffix, scan a four-digit number (i.e., four bar codes from [Appendix H, NUMERIC BAR CODES](#)) that corresponds to that value. See [Table D-1 on page D-1](#) for the four-digit codes.

When using host commands to set the prefix or suffix, set the key category parameter to 1, then set the 3-digit decimal value. See [Table D-1 on page D-1](#) for the four-digit codes.

To correct an error or change a selection, scan [Cancel on page H-3](#).



**Scan Prefix  
(07h)**



**Scan Suffix 2  
(08h)**

ALT Keys	Keystroke
2075	ALT K
2076	ALT L
2077	ALT M
2078	ALT N
2079	ALT O
2080	ALT P
2081	ALT Q
2082	ALT R
2083	ALT S
2084	ALT T
2085	ALT U
2086	ALT V
2087	ALT W
2088	ALT X
2089	ALT Y
2090	ALT Z

**Table 6-4** Keyboard Wedge GIU Key Character Set

## Numeric Keypad

Do not confuse bar codes on this page with those on the alphanumeric keyboard.



